


# CP720

# FLEX LOCATOR PINS

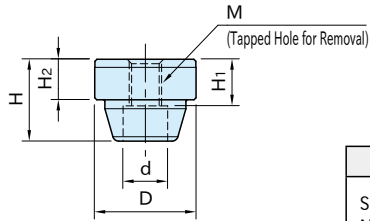


Body
SCM440 steel Nitrocarburized

Part Number	D (g6)	H <sub>2</sub>	H	M	H <sub>1</sub>	d	Weight (g)	Proper Flex Locator Bushings
CP720-16032	16	5.5	11.5	M 5X0.8 (Prepared Hole φ 4.2)	6	8	18	CP725-16032
CP720-25050	25	10	20	M 8X1.25 (Prepared Hole φ 6.8)	11.5	11	49	CP725-25050
CP720-38070	38	15	29.5	M10X1.5 (Prepared Hole φ 8.5)	18	14	176	CP725-38070
CP720-56095	56	22	43.5	M16X2 (Prepared Hole φ 14)	28.5	20	569	CP725-56095


## How To Use

### ■ Mounting Hole Dimension

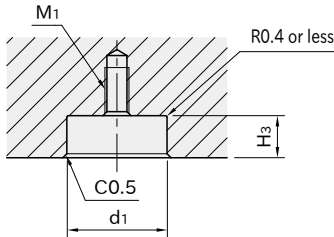


Part Number	d <sub>1</sub> (H7)	H <sub>3</sub> (±0.05)	M <sub>1</sub>
CP720-16032	16	6	M 4X0.7
CP720-25050	25	10.5	M 6X1
CP720-38070	38	15.5	M 8X1.25
CP720-56095	56	22.5	M12X1.75


### ■ Spacing Tolerance

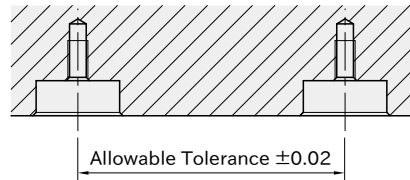

### ■ How to Install and Remove

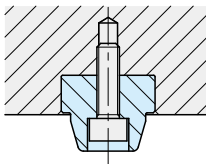

Use a socket-head cap screw to fix the flex locator pin.

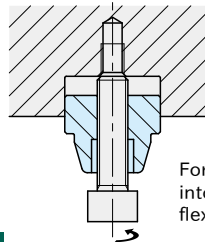

For removal, insert a screw into the tapped hole of the flex locator pin and screw it.

## Reference

- How To Install FLEX LOCATORS (Blind)
- How To Use FLEX LOCATORS (Blind)